



FORCE BIKE CARE CLEANING KIT

The FORCE BIKE CARE CLEANING KIT includes:













U AIL 07437 AIL 07

FORCE BIKE CARE CLEANING KIT — A cleaning kit for washing and basic maintenance of your bike.

The FORCE BIKE CARE CLEANING KIT helps you:

- · Wash the bike to remove heavy dirt.
- Clean and degrease the chain, drivetrain, and hard-to-reach areas.
- Polish the frame and components for a final finish.

The FORCE BIKE CARE CLEANING KIT includes:

8945120 – FORCE microfiber cleaning cloth – to dry the bike after washing and clean dried water spots.

894561 – FORCE DIRT cleaning sponge – for cleaning bike frames.

8945950 – FORCE double, round, fine cleaning brush – for wheel spokes and hard-to-reach places.

8945970 — FORCE fine high cleaning brush — for cleaning the frame and components.

89459 – FORCE CLEAN cassette cleaning brush – for cleaning cassettes, chainrings, and gears.

8946550 — FORCE BIKE SHAMPOO with wax (500 ml) — for washing the bike and creating a protective film.

89463701 – F STRONG chain cleaner with spray nozzle (750 ml) – for degreasing and cleaning the chain and drivetrain.

8945604 – Plastic bucket with handle and lid, 11 L, black.

Recommended procedure for using the FORCE BIKE CARE CLEANING KIT:

- 1. Remove the lid from the bucket and take out all the contents.
- 2. Pre-wash the bike using a garden hose or water poured into the bucket and a brush.
- 3. Spray FORCE STRONG cleaner on the chain, cassette, and chainrings. Let it sit.
- 4. Use a brush to clean all drivetrain components, then rinse with water.
- 5. Fill the bucket with water and add BIKE SHAMPOO cleaner (25-50 ml per 5 liters).
- 6. Use a sponge soaked in the cleaning solution to wash the frame, and use brushes for other components and hard-to-reach areas.
- 7. Rinse the bike with clean water.
- 8. Dry the frame and polish it with the microfiber cloth, and let the entire bike dry.
- 9. Don't forget to lubricate the chain and components prone to corrosion.

Warning:

- All items in the FORCE BIKE CARE CLEANING KIT should only be used for their intended purposes. Improper use may lead to unwanted wear/damage, or other harm to property or health.
- The manufacturer is not responsible for any damages resulting from improper use of the product, including failure to follow recommendations or warnings.
- Any use of the product for purposes other than its intended use is considered improper, and the manufacturer assumes no responsibility for consequences caused by such actions.
- The manufacturer is not responsible for damage or destruction of the product due to improper storage, placement, handling, or use in violation of this user manual.
- The manufacturer is not responsible for malfunctions, limited functionality, damage, or destruction of the product resulting from improper replacement of parts, improper repairs, or any non-standard modifications.
- The manufacturer is not responsible for loss or damage during transport, natural disasters, or other environmental conditions.
- The manufacturer is not liable for damage or destruction of the product, nor for any potential harm to the customer if the product is handled contrary to this manual.





